


RHOWPA Pole Mount

For SpeedDome® Ultra or SpeedDome® Optima Outdoor Housings

Installation Guide

Regulatory Compliance: Safety UL1950

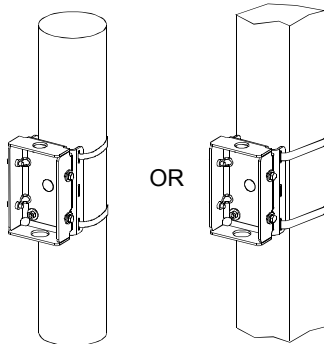

Parts Supplied


Bracket	1	0500-9631-01
Install Kit 0351-2122-01		
Clamp Package	2	6010-0043-01
Nut, Locking, M6	4	5826-0500-020
Washer, Large, M6	4	5842-0500-020

Tools Required

- Socket Wrench Kit w/Extension (metric)
- Screwdriver
- Pliers
- Scissors or metal shears


Procedure

1. With words "this side up" etched in rack facing up, insert rack into screw assembly. Then turn screw just enough to engage rack. Prepare two racks this way.

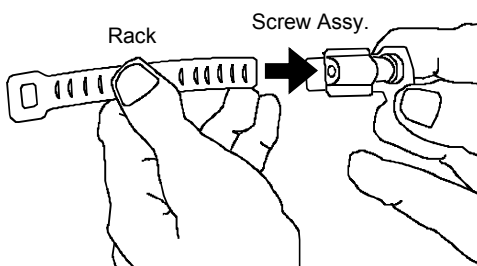


2. Prepare the bands for mounting.

- A. Remove the band from the clamp package and cut two bands appropriate for the diameter of the pole. Slip each band through the upper and lower slots in the bracket.
- B. Bend the right side of each band inward and slip the bend through the large slot in the screw assembly. Flatten the bend tight with fingers.

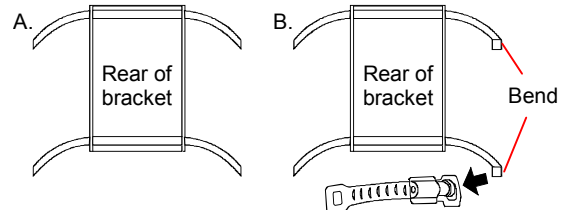


3. Place bracket against the pole. Then wrap one of the band assemblies around the pole so the screws are opposite the bracket.

- A. Cut the band to length 2.54cm (1in) beyond the first notch in the band.
- B. Using your fingers, flatten the last 2.54cm (1in) of the band inward to form a hook. Insert the hook through the remaining slot in the rack and turn the screw to secure the bracket to the pole.
- C. Repeat for the remaining band assembly.

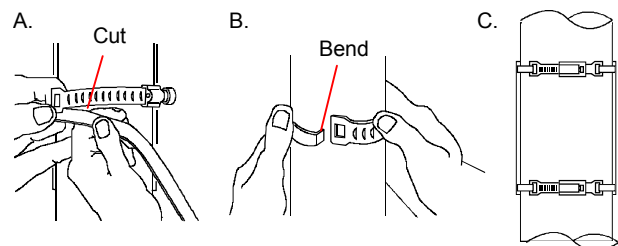

4. Attach mounting structure to the pole bracket according to instructions supplied with the mounting structure.

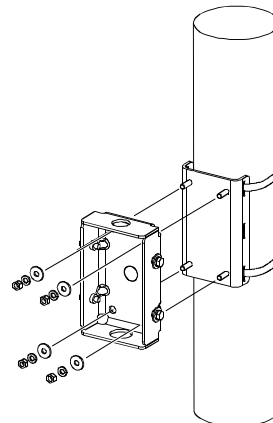

Declarations

Thank you for using American Dynamics products. We support our products through an extensive and worldwide network of dealers. The dealer, through whom you originally purchased this product, is your point of contact if you have a need for service or support. Our dealers are fully empowered to provide the very best in customer service and support. Dealers should contact American Dynamics at (800) 507-6268 or (561) 912-6259 or on the web at www.americandynamics.net.

WARRANTY DISCLAIMER: Sensormatic Electronics Corporation makes no representation or warranty with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

NOTICE: The information in this manual was current when published. The manufacturer reserves the right to revise and improve its products. All specifications are therefore subject to change without notice.

LIMITED RIGHTS NOTICE: For units of the Department of Defense, all documentation and manuals were developed at private expense and no part of it was developed using Government Funds. The restrictions governing the use and disclosure of technical data marked with this legend are set forth in the definition of “limited rights” in paragraph (a) (15) of the clause of DFARS 252.227.7013. Unpublished - rights reserved under the Copyright Laws of the United States.

TRADEMARK NOTICE: *American Dynamics* and *Sensormatic* are trademarks or registered trademarks of Sensormatic Electronics Corporation. Other product names mentioned herein may be trademarks or registered trademarks of Sensormatic or other companies.

COPYRIGHT: Under copyright laws, the contents of this manual may not be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of Sensormatic Electronics.

MDR 1/04